## Telescopic Glide Shelf Guides for range ovens Accessories



## 901511

For range cooker with all electric cavities, this allows you to slide out the shelf fully and safely, very useful when taking baking out of the oven, or for checking or turning hot food. Simple to install, the action is smooth and easy.

Guarda online

## **Specifications**

Features		
Family	telescopic shelves	
Product	cookers	